


Yealink

Ultra-elegant Gigabit IP Phone SIP-T44W

LED Status	Description
Solid red	The phone is initializing.
Fast-flashing red (0.3s)	The phone is ringing.
Slowly-flashing red (1s)	The phone received a voice mail or a text message.

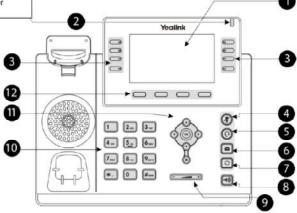

NO.	Item	Description	
1	Phone Screen	Shows a screen with backlight that enables you to view menus and data.	
2	Power LED Indic- ator	Indicates call status, message status and system status of the phone.	
3	Line Keys	Accesses your phone lines and features.	
4	MUTE Key	Toggles the microphone on or off. The LED indicator glows green when the mute ture is activated.	
5	HEADSET Key	Toggles the headset on or off. The LED indicator glows green when the headset i activated.	
6	MESSAGE Key	Accesses your voice messages.	
7	REDIAL Key	Redials a previously dialed number.	
8	Speakerphone Key	Toggles the speakerphone (hands-free) mode on or off. The LED indicator glows green when the speakerphone is activated.	
9	Volume Key	Adjust the volume of the handset, headset, speaker.	
10	Keypad Keys	Allow you to enter numbers, letters, and special characters. If a menu item has an index number, you can use the keypad keys to select the item.	
15.00	Navigation Keys	Scroll through information or options displayed on the screen. Access History and Directory respectively.	
11	OK Key	Confirms actions or answers incoming calls.	
	Cancel Key	Cancels actions or rejects incoming calls.	
12	Soft Keys	Access the function displayed on the screen above the soft keys. The soft keys change depending on what you are doing at the time.	

Line Key LED

Line key LED (associated with the phone line)

LED Status	Description	
Solid green	The line is seized. The line is in conversation.	
Fast-flashing green	The line receives an incoming call.	
Slowly-flashing green	The call is placed on hold.	
Off	The line is inactive.	

Line key LED (configured as a page switch key)

LED Status	Description	
Solid red	There is a call parked on the line, and the line key is not on the current page.	
Fast-flashing green	The line receives an incoming call, and the line key is not on the current page.	
Fast-flashing red	The monitored user whose line key is not on the current page receives an incoming call.	
Off	The line keys are idle.	